

Model 124 with 4MATIC

Oil grades

ATF

Refer to MBNA Factory Approved
Service Products list


Torque specifications

Nm

Oil filler and drain plug

50

Special tools

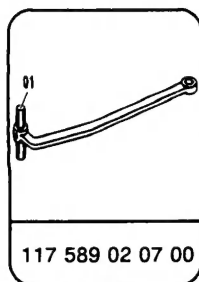

Commercial tools

14 mm hex. driver insert, 1/2" square drive

obtain locally

Note: When checking fluid level, the vehicle should be level.

- Remove filler plug.

Note: If more than approx. 50 cc of fluid flows out of filler hole, the multi-disc clutches AV or ZS are leaking. Check oil level in hydraulic oil reservoir in engine compartment.

Repair or replace transfer case.

- The fluid level is correct, if a small amount of fluid flows out or if fluid level extends up to lower edge of opening.

If not, add fluid.

- Install filler plug and torque to 50 Nm.

